

## NetGear-DGN2200.v2



حضرة الزبون الكريم حتى يتم اعداد جهاز الراوتر خاصتكم يجب اتباع الخطوات التالية :  
 اولا يتطلب توصيل جهاز الراوتر بواسطة كابل شبكة يتم توصيله من خلال مخرج الشبكة  
 في الجهاز الي مخرج الشبكة بالحاسوب الخاص بكم .

ثانيا : التاكيد انه قد تم الاتصال بين الراوتر والحاسوب بنجاح

ثالثا : فتح مستعرض الانترنت لديكم ان كان الانترنت اكسلورير او جوجول كرومي

رابعا : طباعة العنوان الخاص بالراوتر وضغط على انتر


**10.0.0.138**

خامسا : تظهر لديكم شاشة تطلب اسم مستخدم وكلمة سر الخاصة بالراوتر

**Username:** Admin


**Password:** Admin

OK بعد كتابتهم في المكان المخصص لهم يرجى الضغط على

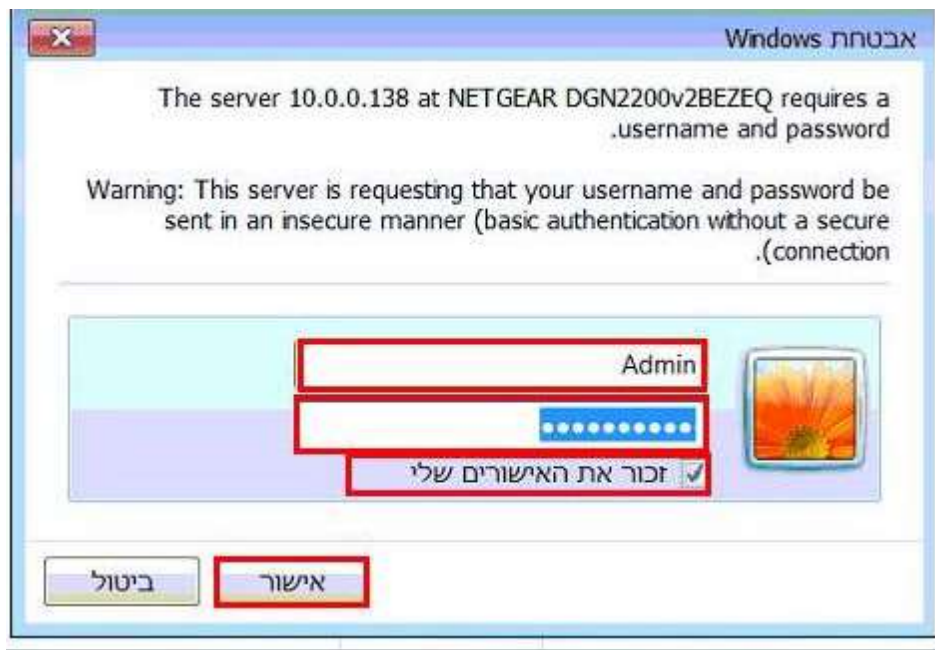

يجب اختيار من القائمة على الجهة الشمال من صفحة اعداد الاروتر التالي :

**Basic setting**

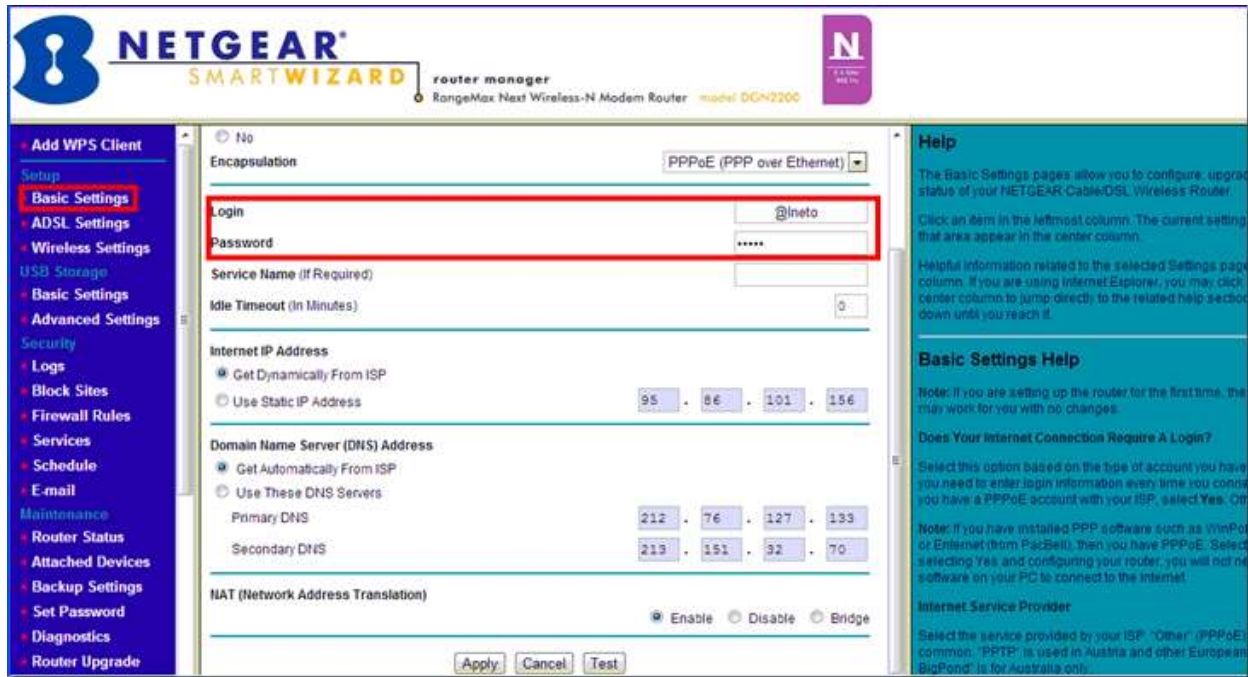

**NETGEAR SMARTWIZARD** router manager  
RangeMax Next Wireless-N Modem Router model: DGND2200

Encapsulation: PPPoE (PPP over Ethernet)

Login: @lneto  
Password: \*\*\*\*\*

Service Name (If Required):  
Idle Timeout (in Minutes): 0

Internet IP Address:  
 Get Dynamically From ISP  
 Use Static IP Address: 95 . 86 . 101 . 156

Domain Name Server (DNS) Address:  
 Get Automatically From ISP  
 Use These DNS Servers:  
Primary DNS: 212 . 76 . 127 . 133  
Secondary DNS: 213 . 191 . 32 . 70

NAT (Network Address Translation):  
 Enable  Disable  Bridge

Buttons: Apply, Cancel, Test

**Help**  
The Basic Settings pages allow you to configure, upgrade status of your NETGEAR Cable/DSL Wireless Router.  
Click an item in the leftmost column. The current setting that area appear in the center column.  
Helpful information related to the selected Settings page column. If you are using Internet Explorer, you may click center column to jump directly to the related help section down until you reach it.

**Basic Settings Help**  
Note: If you are setting up the router for the first time, the may work for you with no changes.  
**Does Your Internet Connection Require A Login?**  
Select this option based on the type of account you have. you need to enter login information every time you connect. you have a PPPoE account with your ISP, select Yes. Other.  
Note: If you have installed PPP software such as WinPcap or Ethernet (from PacBell), then you have PPPoE. Select selecting Yes and configuring your router, you will not need software on your PC to connect to the internet.  
**Internet Service Provider**  
Select the service provided by your ISP. "Other" (PPPoE) common. "PPTP" is used in Austria and other European. "BigPond" is for Australia only.

ومن ثم الضغط على حفظ المعلومات

**Apply/Save**



**NETGEAR SMARTWIZARD** router manager  
RangeMax Next Wireless-N Modem Router (model: DGND300)

**Updating Settings**

NAT allows all LAN PCs to gain Internet access via this Router, by sharing this Router's WAN IP address. In most situations, NAT is essential for Internet access via this Router. You should only disable NAT if you are sure you do not require it. When NAT is disabled, only standard routing is performed by this Router.

**Apply, Cancel and Test Buttons**

Click **Apply** when you finish changing the settings.

Click **Cancel** to return to the original settings.

Click **Test** to connect to the NETGEAR Web site. If you connect successfully, your settings work and you may click **Logout** to exit these pages and... enjoy surfing the web!

If you don't connect successfully:

- Go through the settings and make sure you've selected the correct options and typed everything correctly.
- Contact your ISP to verify the configuration information.
- Read the Troubleshooting section in the Device Installation Guide.
- On the Device GearBox CD, read the Troubleshooting Guide or the Troubleshooting section in the Reference Guide.
- Contact NETGEAR Technical Support.

إذا بالطريقة الموضحة اعلاه يتم الاتصال بالانترنت



**Wireless Settings**

Select the wireless network to configure

Profile	SSID	Guest Network	Security	Enable	Broadcast SSID
Primary	mikrot	No	None	Yes	Yes
2	Bezeq Free 858808	No	None	No	Yes
3	NETGEAR-Guest2	No	None	No	Yes
4	NETGEAR-Guest3	No	None	No	Yes

**Wireless Network**

Name (SSID):

Region:

Channel:

Mode:

Enable this wireless Network

Enable SSID Broadcast

Wireless Isolation

**Wireless Card Access List**

**Security Options**

None

WEP

WPA-PSK

WPA2-PSK (AES)

WPA-PSK (TKIP) + WPA2-PSK (AES)

## اعدادات الشبكة الاسلكية :

حتى يتم وحماية شبكتكم بواسطة كلمة سر يجب اختيارها من القائمة الرئيسية wireless setting-

### Wireless Settings

Select the wireless network to configure

	Profile	SSID	Guest Network	Security	Enable Broadcast	SSID
<input checked="" type="radio"/>	Primary	NETGEAR20	No	WPA-PSK + WPA2-PSK	Yes	Yes
<input type="radio"/>	2	NETGEAR-Guest	No	None	No	Yes
<input type="radio"/>	3	NETGEAR-Guest2	No	None	No	Yes
<input type="radio"/>	4	NETGEAR-Guest3	No	None	No	Yes

---

**Wireless Network**

Name (SSID):

Region:

Channel:

Mode:

Enable this wireless Network

Enable SSID Broadcast

Wireless Isolation

---

**Security Options**

None

WEP

WPA-PSK

WPA2-PSK (AES)

WPA-PSK (TKIP) + WPA2-PSK (AES)

---

Passphrase:  (8-63 characters or 64 hex digits)



ومن ثم في هذه الصفحة يمكنكم اختيار اسم الشبكة خاصتكم في مكان يسمى ب SSID يمكنكم وضع الاسم الذي تريدون وفي نفس الصفحة يمكنكم ايضا وضع كلمة سر حتى تحمي الشبكة خاصتكم ومن ثم الضغط على تطبيق Apply

بهذه الطريقة يتم حماية الشبكة بكلمة مرور خاصة بكم