


## VTECH NB403





1. حضرة الزبون الكريم حتى يتم اعداد جهاز الراوتر خاصتكم يجب اتباع الخطوات التالية :
2. اولاً: يتطلب توصيل جهاز الراوتر بواسطة كابل شبكة يتم توصيله من خلال مخرج الشبكة في الجهاز الي مخرج الشبكة بالحاسوب الخاص بكم .
3. ثانياً : التاكيد انه قد تم الاتصال بين الراوتر والحاسوب بنجاح
4. ثالثاً : فتح مستعرض الانترنت لديكم ان كان الانترنت اكسلورير او جوجول كرومي
5. رابعاً : طباعة العنوان الخاص بالراوتر وضغط على انتر



خامساً : تظهر لديكم شاشة تطلب اسم مستخدم وكلمة سر الخاصة بالراوتر

**Username:** Admin

**Password:** Admin

بعد كتابتهم في المكان المخصص لهم يرجى الضغط على login اي دخول



Primo Telecommunication

072-2467000 | support@099.net.i | www.099.net.il



سادسا : تظهر القائمة الرئيسية يرجى اختيار من القائمة

## SETUP

ومن ثم اختيار

## Wan Setup

ومن الجهة الشمال توجد قائمة الضغط على **Connections**

The screenshot shows the router's configuration interface. The top navigation bar includes 'WAN Setup', 'Connections', 'LAN Setup', 'Firewall/NAT services', 'ADVANCED WIRELESS', 'TOOLS', 'STATUS', 'STORAGE', and 'HELP'. The 'Connections' section is active, displaying a table of available connections:

Name	Enabled	Status	Uptime	Port	Type	IP address	Description	Delete
vdsl_ipv4	<input checked="" type="checkbox"/>	Online	24 minutes	PTM over DSL	PPPoE	79.182.99.133		<input type="checkbox"/>
adsl_ipv4	<input checked="" type="checkbox"/>	N/A	0 seconds	ATM over DSL	PPPoE	N/A		<input type="checkbox"/>

Below the table are 'Apply' and 'Reset' buttons. A 'New connection' section contains input fields for 'Name', 'Port / Type', and 'Description', along with 'Add' and 'Reset' buttons.

حتى يتم اعداد الشبكة يرجى البحث عن **PPPoE** واختيار

## PPPoE



Primo Telecommunication

072-2467000 | support@099.net.i | www.099.net.il

WAN Setup

**Connections**

LAN Setup

LAN configuration

Firewall/NAT services

### Connections

#### Available connections

Name	Enabled	Status	Uptime	Port	Type	IP address	Description	Def
vdsl_ipv4	<input checked="" type="checkbox"/>	Online	29 minutes	PTM over DSL	PPPoE	79.182.99.133		<input type="checkbox"/>
ppp	<input type="checkbox"/>	N/A	0 seconds	PTM over DSL	PPPoE	N/A	dcd	<input type="checkbox"/>
adsl_ipv4	<input checked="" type="checkbox"/>	N/A	0 seconds	ATM over DSL	PPPoE	N/A		<input type="checkbox"/>

Apply Reset

#### New connection

Name:

Port / Type:

**PTM over DSL**

- Static IPv4 (Statically configured IPv4 over Ethernet)
- DHCP (DHCP-configured IPv4 over Ethernet)
- PPPoE (PPP over Ethernet)**
- Bridge (Ethernet bridge)
- Static IPv6 (Statically configured IPv6 over Ethernet)
- IPv6 (Dynamically configured IPv6 over Ethernet)
- IPv6 PPPoE (Dynamically configured IPv6 over PPP over Ethernet)

**ATM over DSL**

- PPPoE (PPP over Ethernet over ATM)
- DHCP (bridged) (DHCP-configured IPv4 over Ethernet over ATM)
- Bridge (Ethernet bridge)
- Static IPv4 (bridged) (Statically configured IPv4 over Ethernet over ATM)
- PPPoA (PPP over ATM)
- DHCP (routed) (DHCP-configured IPv4 over ATM)
- Static IPv4 (routed) (Statically configured IPv4 over ATM)
- Static IPv6 (bridged) (Statically configured IPv6 over Ethernet over ATM)
- IPv6 (Dynamically configured IPv6 over Ethernet over ATM)
- IPv6 PPPoE (Dynamically configured IPv6 over PPP over Ethernet over ATM) \*

login. All rights reserved. Copyright a

والان يرجى تعبئة اسم المستخدم وكلمة السر بشكل صحيح

0

### PPP

Username:

Password:

MRU:

Maxfail:

Keepalive retry:

Keepalive interval:

Proxy ARP

Persist

On demand

Idle time:

Debug

### Firewall

Firewall

NAT

Clamp TCP MSS to path MTU

DMZ host IP address:

### Default routing

Confirmation:  None

Required for HTTP traffic

Required for all traffic

ومن ثم الضغط على تطبيق apply



## اعدادات الشبكة الاسلكية :

تغير اسم الشبكة بما يناسبكم :

1. من القائمة اختيار WIRELESS
2. اختيار من القائمة في الجهة الشمال SSID list
3. يرجى كتابة اسم الشبكة حسب رغبتكم SSID
3. للانهاء الضغط على Create

You are logged in as Admin. Sa

099.NET.IL

SETUP ADVANCED WIRELESS TOOLS STATUS STORAGE HELP

SSID list Wireless

PHY  
Setup  
AP list

The "Wireless" section lets you configure wireless related features.

**Existing SSIDs**

SSID	Enabled	Status	LAN group	Authentication	Delete
099.net.il	<input checked="" type="checkbox"/>	Online	lan0	MIXED_WPA_WPA2	<input type="checkbox"/>
RonenG	<input checked="" type="checkbox"/>	Online		WPA2	<input type="checkbox"/>

Apply Reset

**New SSID**

SSID:

LAN group:  
lan0

Create Reset




Primo Telecommunication

072-2467000 | support@099.net.i | www.099.net.il

## تغيير كلمة السر بما يناسبكم :

1. من القائمة على الجهة الشمالية اختيار Security
2. اختيار نوع التشفير
3. كتابة كلمة السر المناسبة
4. للانتهاء اختيار تطبيق APPLY

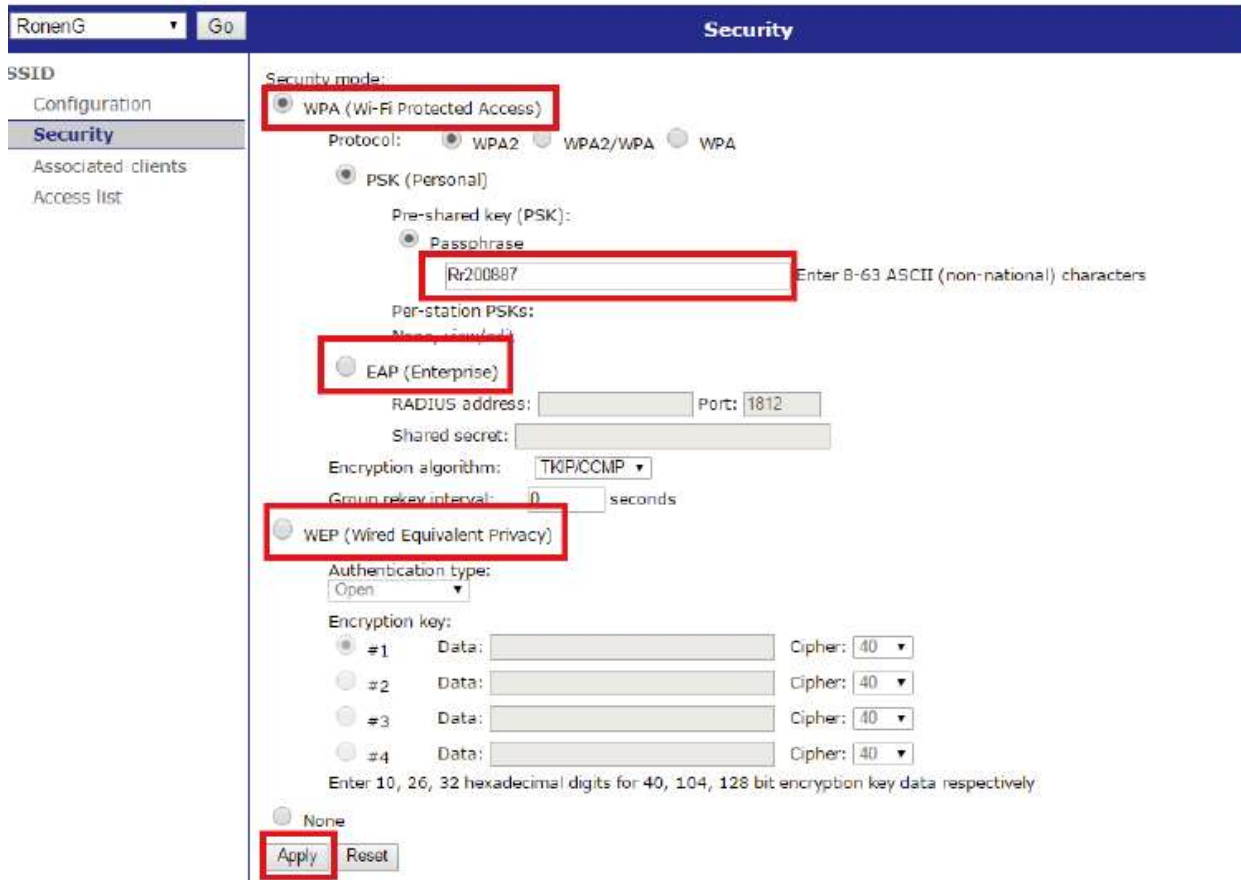

RonenG Go Security

SSID

- Configuration
- Security**
- Associated clients
- Access list

Security mode:

WPA (Wi-Fi Protected Access)

Protocol:  WPA2  WPA2/WPA  WPA

PSK (Personal)

Pre-shared key (PSK):

Passphrase

Enter 8-63 ASCII (non-national) characters

Per-station PSKs:

EAP (Enterprise)

RADIUS address:  Port: 1812

Shared secret:

Encryption algorithm: TKIP/CCMP

Group rekey interval: 0 seconds

WEP (Wired Equivalent Privacy)

Authentication type: Open

Encryption key:

#1 Data:  Cipher: 40

#2 Data:  Cipher: 40

#3 Data:  Cipher: 40

#4 Data:  Cipher: 40

Enter 10, 26, 32 hexadecimal digits for 40, 104, 128 bit encryption key data respectively

None